

Dune Right Ramp Diverter Guide Installation

In this kit:

- Clear plastic guide
- Black spacer

You will need:

- 1/4" nut driver
- 11/32" nut driver
- 1/4" flat wrench or needle nose pliers


Remove the upper sand dune sculpt assembly:

- Remove the three 11/32" nuts and the one 1/4" hex head machine screw as shown in the photo on the left.
- The clear plastic spacer circled on the right will be replaced by the new black spacer.




Remove the old clear plastic to be replaced by the newly shaped clear plastic:

- Using an 11/32" nut driver and a 1/4" wrench or needle nose pliers, work from above and below to remove this hardware stack by the right ramp.

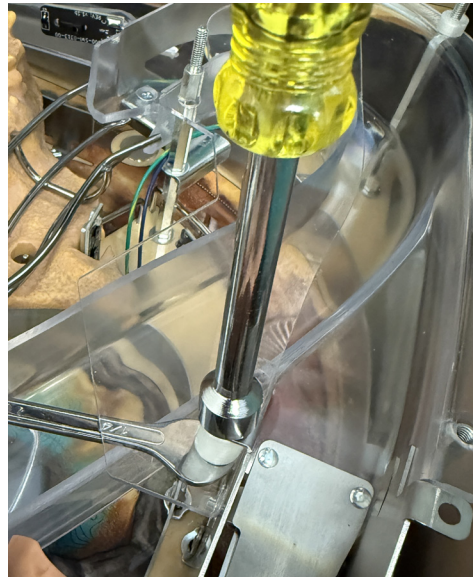

Install the new clear plastic:

- Place the new plastic on the same support holes as the previous spacer.
- Reverse the process above for the removal of the plastic stack hardware and install these pieces on the new plastic.
- Put the new black spacer in place of the old clear spacer circled above, ensuring that the hollow end is facing down.

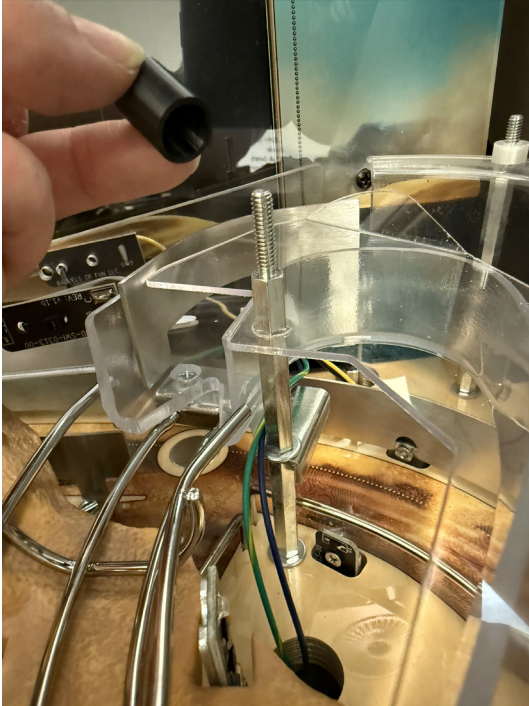

Re-install the upper sand dune sculpt assembly:

- Be mindful of the placement of the spacer on the right side of the right ramp and hold it securely as you put the sculpt in place.

